

BLANK PAGE

PLEASE READ BEFORE OPERATING

WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any speed control device.

IMPORTANT: During the first few minutes of initial use, a slight odor may be noticeable. This is normal and will quickly disappear.


CAUTION: Read and follow all instructions before operating fan. Do not use fan if any part is damaged or missing.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- This appliance is not intended for use by any person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use fan only for intended use.
- To protect against electrical shock, do not immerse unit, plug, or cord in water or spray with liquids.
- Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
- Never insert fingers or any other objects through the grill when the fan is running.
- Make sure fan is on a stable surface when operating to avoid risk of overturning.
- Do not use fan directly in front of an open window, in the presence of explosive and/or flammable fumes, liquids or gasses or near an open flame, cooking or other heating appliances.
- Do not operate if cord or plug are damaged.
- If the appliance malfunctions or has been dropped or damaged in any manner, please contact Vytronix.
- To avoid risk of injury if placing fan on a raised surface, keep cord out of reach of children who may pull the cord.
- To disconnect, grip plug and pull from wall outlet. Never pull on the cord.
- Always use on a dry surface.
- This product is intended for indoor domestic use only and not for industrial or outdoor use.
- Do not use fan near curtains, plants or anything which may get sucked into the fan.
- Never wrap the cord tightly around the appliance, as this could cause the cord to fray and break internally.

GETTING TO KNOW YOUR VYTRONIX TOWER FAN

1. Front enclosure
2. Rear enclosure
3. Upper cover
4. Dial
5. Left Base
6. Right Base
7. Rotary board
8. Motor holder
9. Fixed mount of Connecting rod
10. Fixed ring
11. Bearing cap
12. Propeller holder
13. Connecting rod
14. Synchronous Motor
15. Motor
16. Power cord
17. Capacitance
18. Propeller
19. Switch
20. Eccentric bushing
21. Iron cap

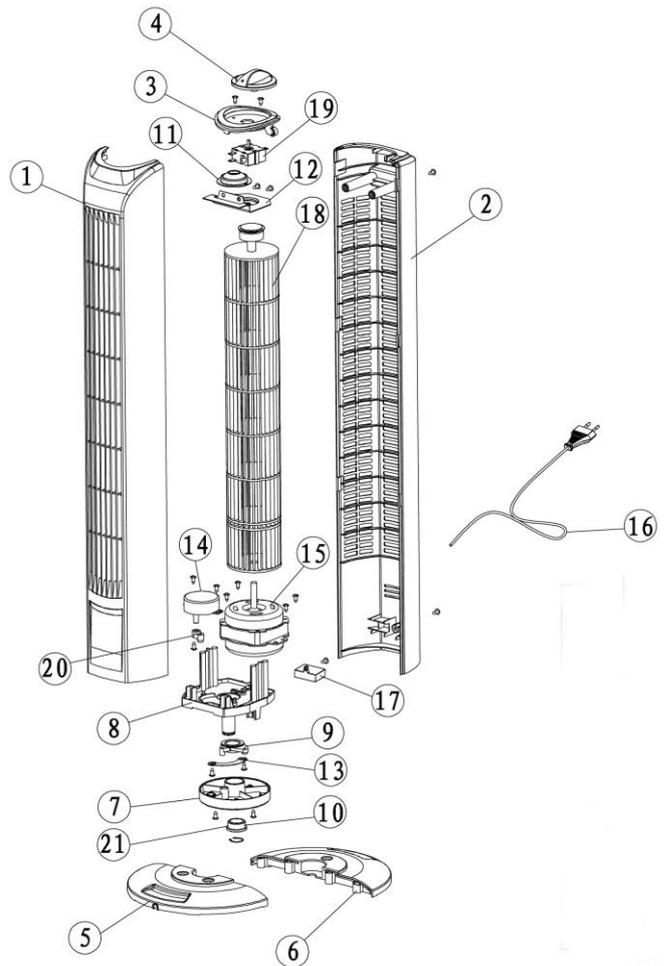

ASSEMBLY INSTRUCTIONS

1. Pass the power cord through the central gate and firmly clamp the left base with the right base, then align the position of fan body with the base, and fix in place with the provided screws.
2. Pass the power cord through the gap of the base.

OPERATING INSTRUCTIONS

Important: This appliance is for household use and can be plugged into any 220V AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

Functions of the fan

1. 0: to stop the fan
2. SPEED SELECTION: to start the fan: 1 = Low, 2 = Med, 3 = High
3. OSCILLATION  : to start and stop the oscillation of the fan.

CARE AND CLEANING

This appliance requires little maintenance and contains no user serviceable parts.

Do not try to fix it yourself, please contact Vytronix if you feel servicing or repair is needed so that we may advise.

The fan is permanently lubricated and will not require additional lubrication for the life of the fan.

TO CLEAN: Before cleaning, turn fan off and unplug from electrical outlet. Wipe off excess dust with a lint-free cloth. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation. A vacuum cleaner hose can be used to clean these vents. Do not immerse fan in water or any other liquid.

TO STORE: Make sure to disassemble and clean the fan before storing. Retain the original packaging for the purpose of storing the fan. Always store fan in a dry place. Never store it while it is still plugged in. Never wrap the cord tightly around the fan, and do not put any stress on the cord where it enters the fan housing, as it could cause the cord to fray and break.


SPECIFICATION

Watts(W)	Volts
45W	230V~50Hz

WARRANTY REGISTRATION

To register you free one year Vytronix guarantee visit www.vytronix.com using product code: **brandnew-vytronix-tf48b**

SAFE DISPOSAL

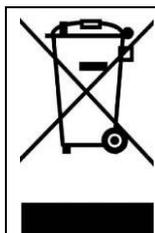

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To arrange safe disposal of your used device, please use the return and collection systems or contact the retailer where the product was purchased.